


Power Distribution Hub (PDH), Breakers, and Fuses

Power Distribution Hub (PDH), Breakers, and Fuses

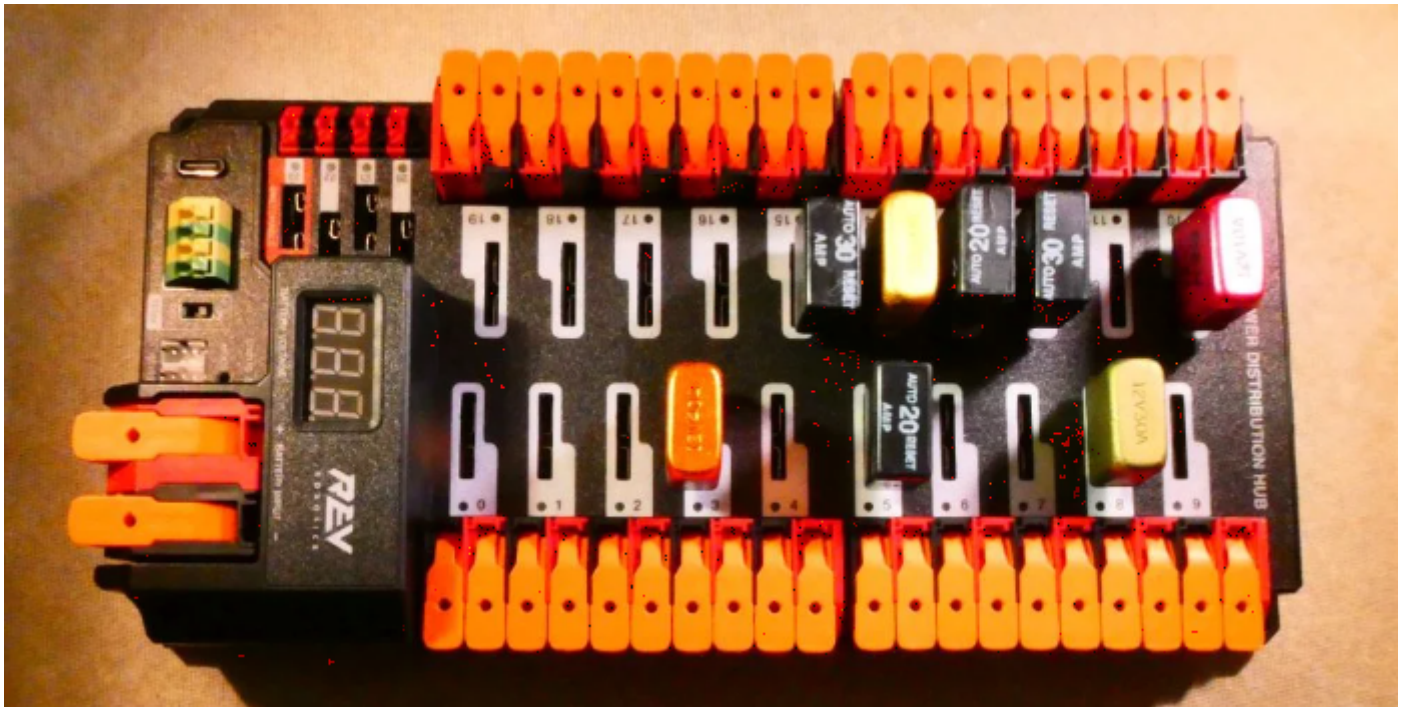

Usage

The power distribution hub, or PDH for short, distributes power to the entire robot. There are 24 total ports, 20 for components needing a larger power supply and 4 who need smaller supplies. There are also 2 ports to support a CAN chain (yellow and green ports).

When plugging components into the PDH it is best practice to use breakers or fuses. If there is ever a power surge breakers and fuses will be able to stop it from reaching the more expensive and important parts. There are different types of breakers and fuses based off of the amount of amps they let through. The main difference between breakers and fuses is their reusability. Breakers are reusable due to a small sheet of metal which bends breaking a circuit when heated to a certain temperature. Fuses are not reusable as when too much electricity flows through it it heats up and pretty much melts itself.

How to Wire/ Connect

For the CAN chain and the 4 smaller ports they need a 22 gauge wire with a feral. In order to insert the wire into the ports use a small flat head screw driver and press down on the square button with a diagonal cut located directly above where you insert the wire. Hold it down until the metal part of the feral has been inserted then let go of the button to lock the wire in place.

In order to connect to the battery to get power use 6 gauge wire. On the bottom left on the image above the bigger red and black ports is where you insert the wires. First strip the wire bare by about a 3/4ths of an inch and then insert the bare wire into the 2 ports. Lift the orange lever above the 2 ports to unlock it, then insert the wire, push down on the lever to lock in the wires.

For the 20 larger ports 12 gauge wire is recommended. No crimps or ferals are needed, instead just strip the wire until roughly 3/4 of a inch of it is bare metal. There is a large lever directly above the hole where the wire should be inserted, pull up on the lever to unlock the port and once the wire is fully inserted so no metal is visible push the lever back down to lock it into place.

Breakers are placed in the white slots behind one of the 20 port taking up majority of the PDH. Fuses are placed in the smaller slots above the CAN chain ports.

(NOTE! Breakers need to be inserted in a certain way. If you look at the bottom of the breaker where the 2 prongs are sticking out you will see that the prongs are off centered. When placing the breaker into the PDH make sure the side furthest from the 2 prongs is lined up on the right or on the same side where there is more white paint marking where to insert it)

Additional Information

(paragraph of information)

Revision #2

Created 21 August 2024 04:31:12 by <Sophie>

Updated 28 August 2024 03:45:37 by <Sophie>