


Practices

Use a “Goldilocks Approach”

Too much exposed copper can lead to short-circuiting

Not enough creates a weak connection and can come out at the worst time

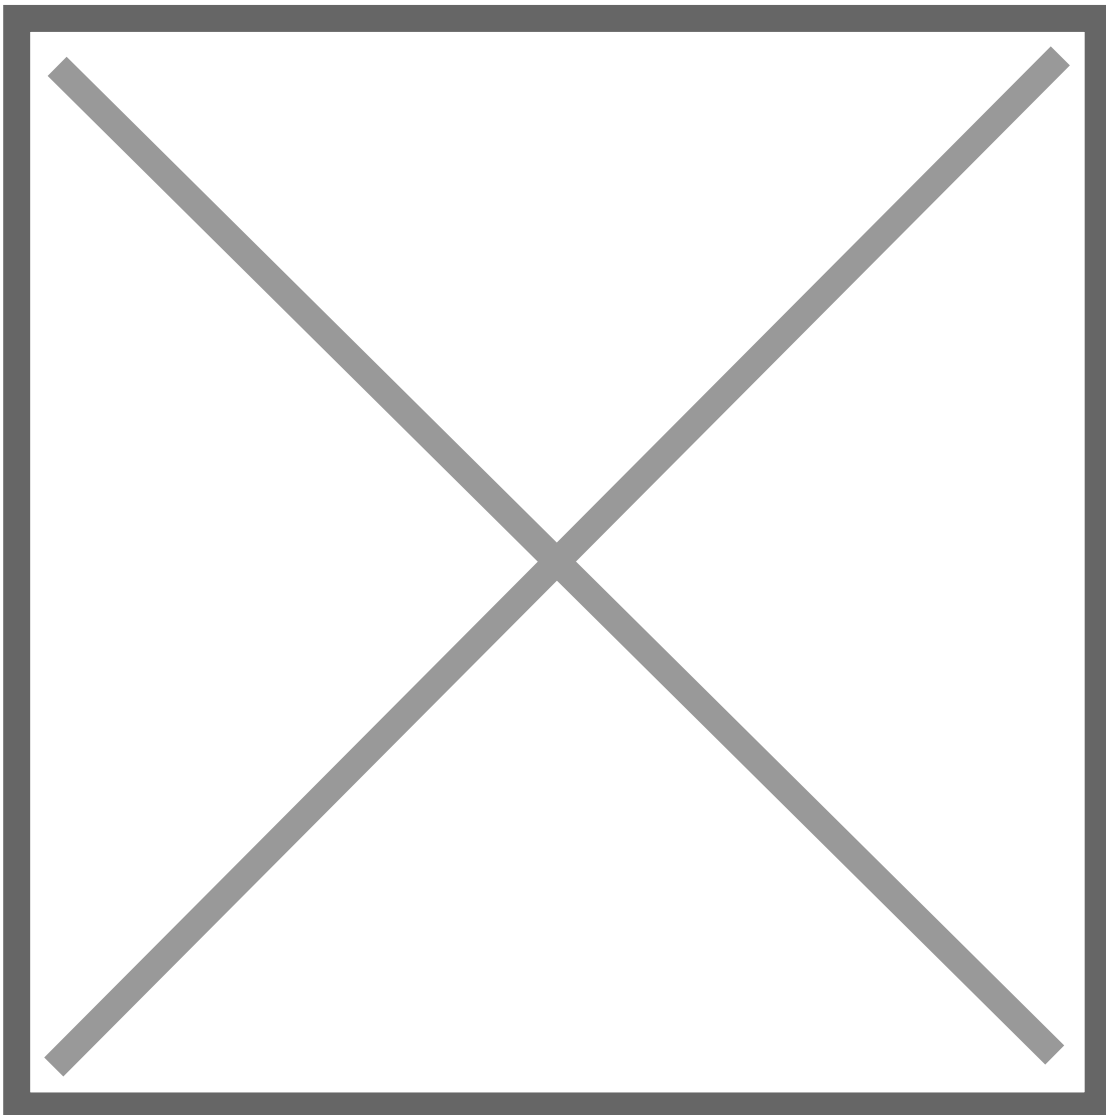

Have someone else pull-test your connections after you have crimped a wire (cross-check)

Revision #2

Created 6 June 2025 15:57:01 by mukiewukie16

Updated 2 July 2025 15:43:43 by mukiewukie16